

INSTALLATION GUIDE

STEP-BY-STEP INSTRUCTIONS FOR PROPER INSTALLATION OF THE CERTA-LOK® ADAPTER


This instructional guide walks you through the process of installing our products efficiently and effectively. Follow these steps carefully to ensure a successful installation.

Step 1: Lubricate the O-Ring

Thoroughly inspect the pipe end to ensure it is free from debris or any other obstructions.

Lubricate the O-Ring on the adapter with a brush.


This lubrication will aid in the proper sealing of the connection during installation.

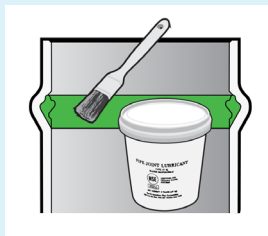

Step 4: Mark Min./Max. Insertion Depth

Measure the length of the adapter bell and mark the minimum and maximum insertion depths on the pipe.

This step ensures proper alignment during installation.

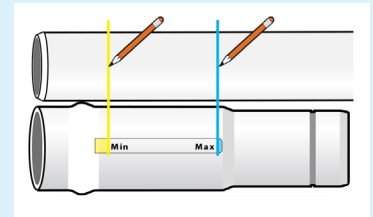

Step 2: Cut Pipe to Length


If necessary, cut the spigot end of the pipe to the desired length using appropriate tools.

This step is optional and should be performed based on your specific installation requirements.

Step 3: Bevel Pipe After Cut

After cutting the spigot end, bevel the pipe end.

Beveling helps create a smoother transition and facilitates a secure connection.

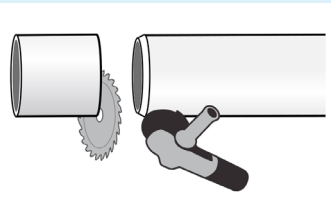

Step 5: Position Adapter Between Marks

Insert the adapter bell end into the pipe, ensuring that it faces the spigot end.

Carefully position the adapter so that the end falls between the marked insertion depth indicators on the pipe.

